

Contents Table:

- In the Box 1
- Product Features 1
- Download the App 2
- User Guide 5
- Product Features 8
- Other Specifications 14
- Warranty 16

Package contains:

- 1 x Watch
- 1 x Charger
- 1 x Manual
- 1 x Warranty Card
- 1 x Feature Card
- 1 x Sticker Card
- 1 x Offer Card


Product Features:



Wear with Ease

Properly wear the device on your wrist and adjust it at a comfortable position. Below picture as reference.

Tip: While using Heart Monitor Rate, please wear the device a little tight

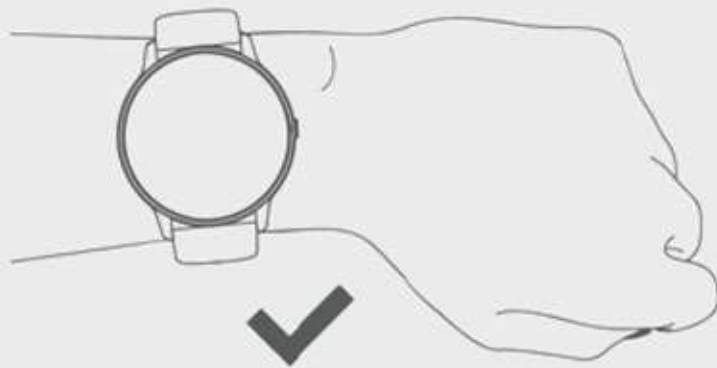

Download & connect with App


To get detailed records of your day to day activities and health status, you can download GloryFit App. You can connect your smartwatch and device with simple steps. Connect with the GloryFit App and enjoy the features.

Follow the following steps to download and install GloryFit App to begin your fitness journey:

- Scroll down on watch face
- Click “Settings--QR code”
- Use your device to scan QR code and download & install “GloryFit” App
- Alternatively, you can download and install “GloryFit” App from Play Store for android device and App Store for iOS device.



Open the “GloryFit” App and select "Add Device" on the device page, and follow the instructions written below on the screen.

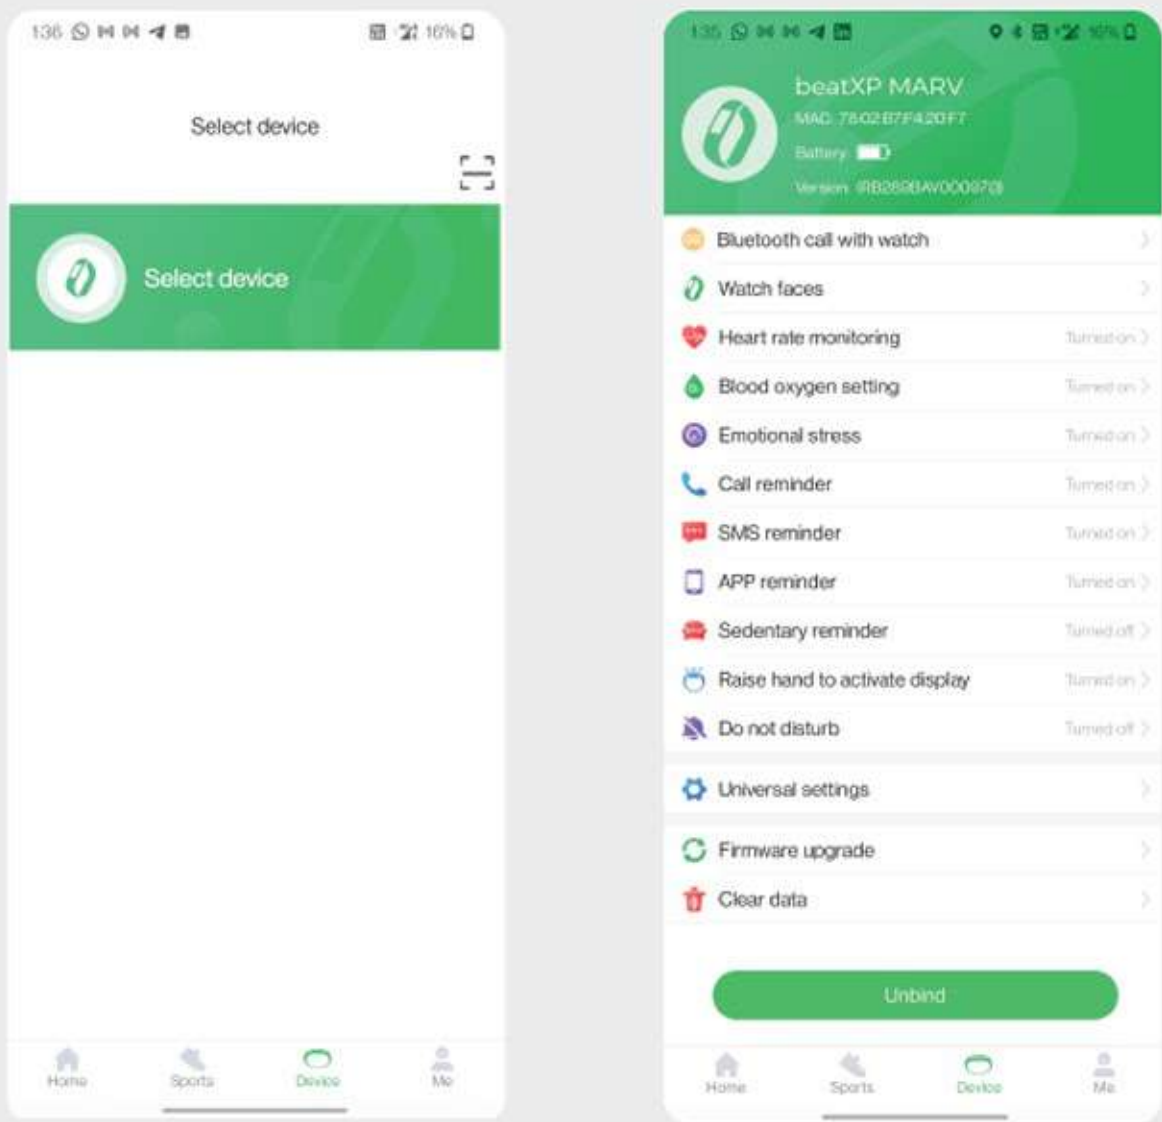

Call with Bluetooth feature

Android Devices

Once the watch is connected to “GloryFit” App correctly:

- Connect device through bluetooth to the smartwatch
- Reminder will pop-up as “PAIR”
- Choose to pair with “beatXP MARV”
- Your device is now successfully connected

iOS Devices

Once the watch is connected to “GloryFit” App correctly:

- Go to settings page of your device
- Select and connect with “beatXP MARV”
- Click to pair
- Bluetooth call feature can be used once paired successfully

Tips to Boast the Performance:

1. Please upgrade the “GloryFit” App to the latest version to get a better experience.
2. Recommended device system:
 - for Android 5.0 or above
 - for iOS 9.0 or above

Operating Instructions

- **Shortcut menu:** Slide down from the main page to enter the shortcut page.
- **Read notifications:** Slide up from the main page to read notifications.



- **Change menu style:** To change menu style, go to settings--theme & select the desired one.

Alternatively, click the icon besides torch by sliding down from the main menu.

You can switch among 3 theme styles (List, Sudoku, and Nest)



- **Quick view:** Slide the right to left on main watch face for the quick view



- **Change watch faces:** Long press the watch interface for 3 seconds to enter the dial selection interface. Swipe left or right to switch dials, and tap on the desired interphase to select it.




- **Power on/off:** Press the side button for 3 seconds to switch on/off the watch



Product Features

- **Sports modes:** There are multiple sports modes in your MARV smartwatch, you can select the desired sports mode.
- **Respiratory rate:** You can measure your current respiratory rate. The value is for reference only and cannot be used as a medical report.
- **Phone:** Call your loved ones on a single tap
Dials: Enter any phone number for calling
Call history: Record your call history
Contacts: Contacts can be added on the MARV smart watch

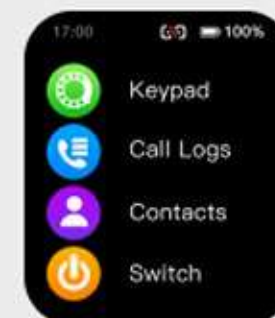

- **Heart rate monitor:** Measure real-time heart rate value; beatXP MARV can record and display the heart rate value throughout the day, and the App saves the average heart rate value at every ten minutes.



- **Sleep monitor:** Record and display the total sleep, deep sleep and light sleep duration of the previous night. More detailed information analysis and data records can be viewed in the App.



- **Blood pressure:** You can easily measure the real-time blood pressure and you can view the detailed report in the App.



- **Blood oxygen level:** Measure real-time blood oxygen value and save data for every ten minutes. Also view the detailed information and data records in the App.



- **Health status:** You can record steps, distance, calories for the day. Detailed information analysis and data records can be viewed and analyzed in the App.




- **Weather:** You can check the weather conditions for next 4 days. The watch must be connected to the App before data can be obtained. If the connection is disabled for a long time, the weather information will not be updated.



- **Music control:** After connecting to the device, beatXP MARV can control the music play/pause/previous/next song on the mobile phone, and the volume can be adjusted.



- **Message:** You can view text notifications, upto 8 latest messages will be shown.

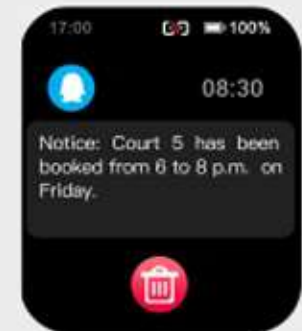

- **Alarm clock:** You can set alarms, during an alarm, watch will vibrate, ring and display will turn on.



- **Breath training:** You can set breath rhythm and time, follow instruction to have breath training.



- **Mood:** You can analyze your current mood, it displays your mood status for 24 hours. For detailed information, please check the report in the App.



- **Pressure:** Measure current stress level, in the App it records and displays 24 hours stress level data, detailed information and records can be viewed in the app. Value is for reference only and cannot be used as a medical report.



- **Games:** Enjoy games like Falling Bird and Number Klotski with the beatXP MARV smartwatch.




- **Voice assistant:**


Click voice assistant function icon, make sure the bluetooth is successfully connected before you make commands.



- **Functions:** Stopwatch / timer / find phone / flash light / calculator, can be accessed through the smart watch

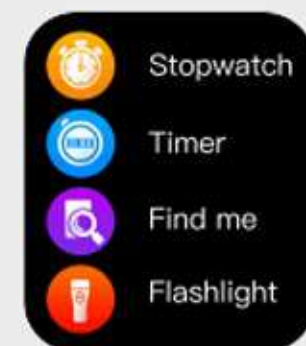

- **Setting:** Dial / Theme / Brightness / Screen Time / Sound / Reset / Off / Info / QR Code / Password can be accessed through the smart watch

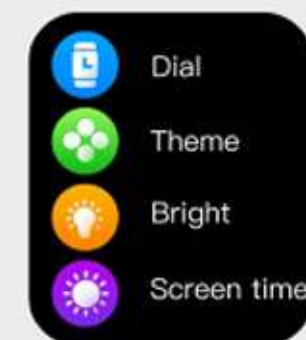

Note: Measurements for health related data are for reference only and cannot substitute to the consultation of a medical professional

Other specifications: Along with above mentioned features, you can also enjoy other features as follows:

- Sedentary reminder
- Do not disturb mode
- Low battery reminder
- Incoming call reminder
- Find watch with your device
- Customize watch face
- Turn the wrist to wake up the screen
- Physiological cycle reminder
- Goal achievement reminder

Charging

- Attach the charging cable to the watch charging port, ensure the metal pins are fully connected
- Please use the correct charging adapters which are 5V or 0.5A and above

Note: If the smart watch can not be powered on after being charged for a long time, please clean up the charging metal pins and make sure that it is getting charged.

Warranty

- One year replacement warranty on a manufacturing defects

Following reasons will discontinue the warranty:

- Personal assemble or disassemble.
- Got damaged by falling.
- Users caused damage or due to the third party's fault, improper use (such as: water in the smart watch, external force shattering, scratch during use etc.)
- Please submit your details using warranty card to initiate the warranty period of the beatXP MARV.
- Please contact beatXP customer support team for warranty claim.